


TO UP SHIFT

- START WITH SELECTOR IN DOWN POSITION
- SHIFT 1-2-3-4-5 RAISE SELECTOR
- SHIFT 6-7-8-A

TO DOWN SHIFT

- SHIFT A-8-7-6 DEPRESS SELECTOR
- SHIFT 5-4-3-2-1

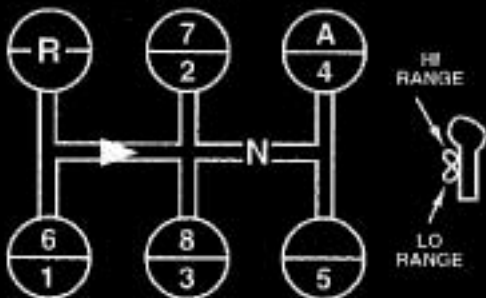

DO NOT CHANGE RANGE WHILE MOVING IN REVERSE

TECHNICAL SUPPORT LINE
(INCLUDING ALASKA & CANADA)

1-800-401-9866