

SPICER®


SD PS 101

TO UP SHIFT

- START WITH SELECTOR IN DOWN POSITION
- SHIFT LL - L - 1 - 2 - 3
RAISE SELECTOR
- SHIFT 4 - 5 - 6 - 7 - 8

TO DOWN SHIFT

- SHIFT 8 - 7 - 6 - 5 - 4
DEPRESS SELECTOR
- SHIFT 3 - 2 - 1 - L - LL

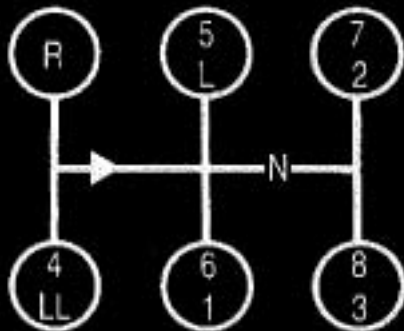

HI
RANGE

LO
RANGE

DO NOT CHANGE RANGE WHILE MOVING IN REVERSE

SPICER SUPPORT LINE™
(INCLUDING ALASKA & CANADA)
800 - 666 - 8688